

## Delivery Program

<b>Product Category:</b>	Torque
<b>Model:</b>	1700A
<b>Order Code(s):</b>	N/A

### USE THE CHART BELOW TO DETERMINE LEAD TIMES<sup>1</sup>

The range or option code with the longest lead time dictates the shipping time. Categories shaded in grey are required selections. For example (reference only):

If you build this:	The order configuration is this:	The delivery class is:
1700A	1700A	<b>Build-to-order, call Honeywell for lead time</b>

	<b>Quick-ship</b> (Ships in 1-5 days)	<b>Fast track manufacture</b> (Ships within 4 weeks)	<b>Build-to-order</b> (Call Honeywell 1-800-848-6564 or +1 614-850-5000)
<b>Compensated transmitter temperature</b>			<p>This product is built to order. Please contact Honeywell for delivery information.</p>
<b>Environmental protections</b>			
<b>Receiver power supply</b>			
<b>Voltage pin access</b>			

<sup>1</sup> LEAD/SHIPPING TIMES ARE APPROXIMATIONS AND MAY VARY DEPENDING ON PRODUCT AVAILABILITY AND OTHER FACTORS. IN NO EVENT SHALL HONEYWELL BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES, EVEN WHERE HONEYWELL HAS BEEN ADVISED OF, OR IS OTHERWISE AWARE OF, THE POSSIBILITY OF SUCH DAMAGES, FOR FAILURE TO MEET SUCH LEAD / SHIPPING TIMES.

*Note: Before selecting option/s, please refer to the Test and Measurement catalog or product data sheet for special application notes and compatibility. A catalog can be ordered on-line at <https://home.honeywell-online.com/newTMcatalog>. Product data sheets are available on Honeywell's web site at <http://content.honeywell.com/sensing/sensotec/catpages.asp>.*